



# PKS-TMF-1000

## THERMAL MASS GAS FLOWMETER



# CONTENTS

Safety Information .....	1
Part 1 Introduction .....	4
Part 2 Specifications .....	6
Part 3 Mechanical Construction .....	8
3.1 Appearance .....	8
3.2 Dimensions .....	9
Part 4 Wirings .....	11
4.1 Instruction of Sensor Wirings .....	11
4.2 Instruction of Transmitter Wirings .....	11
4.3 The Wirings of Power Supply .....	12
Part 5 Installation .....	14
5.1 Installation Position .....	14
5.2 Pipework requirements .....	16
5.3 Installation Steps .....	17
Part 6 Operation and Programming .....	19
6.1 Display .....	19
6.2 Parameters Setup .....	20
Appendix 1 Troubleshooting and Repair .....	
Appendix 2 The Density and Conversion Coefficient of Common Gas .....	
Appendix 3 Upper Range Value of Common Gas .....	

# Safety Information

Thank you for purchasing our quality Thermal Gas Mass Flowmeter with independent research and development.

We have written this guide to provide the persons responsible for the installation, operation and maintenance of your flow meter with the product specific information they will need.

In order to prevent damage to instrument and make the instrument in the best performance and stable operation, please read this manual thoroughly before installation.

Please have a safekeeping of this manual and together with the instrument after reading.

Please pass this manual to technical department of end user to keep.

This manual classifies important grade of safety attentions by Caution and Warning.

## Caution



Error operation in case of ignoring the tips might cause the personal injury, or damage to the instrument and property.

## Warning



Error operation in case of ignoring the tips might cause the personal injury or major accident.

This manual contents the following icons:

- Indicates safety attentions which are dangerous.
- Indicates safety attentions which are needed to pay attention to.
- Indicates safety attentions which are forbidden.

### Select explosion-proof instrument for explosive environment application

Confirm whether the nameplate of instrument has the identifiers of explosion-proof certification and temperature class, the instrument can't be used in explosive environment without those identifiers.

### The explosion-proof temperature class of instrument must meet the explosion-proof and temperature of environmental requirements on site

When the instrument is in used explosion-proof environment, make sure that the explosion-proof certification and temperature class of instrument meet to the requirements on site.

 **No opening while working in explosive environment**

Before wirings, please power instrument off.

 **The protection class of instrument must meet the working condition requirements on site**

The requirement of protection class on site should be under, or the same as the protection class of instrument to ensure that the instrument is working fine.

 **Confirm the power type**

Customers can select the power type: 220VAC or 24VDC (Please state it when ordering).

Please confirm the power type before installation.

 **Confirm the working environment of instrument and medium temperature**

The environment on site and the maximum medium temperature should be under the nominal value of instrument. (The details of nominal value are shown in Part 2 Specifications.)

 **No hot-tapped installation and maintenance while the medium temperature is too high**

When temperature of measuring medium is higher than the temperature that human can bear, or higher than the temperature of possible danger, should shut down or do cooling process to reach a safety temperature, and then do hot-tapped operation. If there are no conditions to do hot-tapped operation, should shut down to avoid dangers.

 **Confirm the ambient pressure of instrument and medium pressure**

The ambient pressure on site and the maximum medium pressure should be under the nominal value of instrument. (The details of nominal value are shown in Part 2 Specifications.)

 **No hot-tapped installation and maintenance while the medium pressure is too high**

When absolute pressure of measuring medium is higher than 5 times standard atmospheric pressure, or higher than the pressure of possible danger, should shut down or do reducing pressure to reach a safety pressure, and then do hot-tapped operation. If

there are no conditions to do hot-tapped operation, should shut down to avoid dangers.

#### **Extra requirements of special medium**

The properties of some gas are special, it is needed to order special product, please check the manual of special product thoroughly to make sure whether it meets the requirements on site before installation.

#### **No hot-tapped installation and maintenance while the medium is dangerous gas**

When the medium may cause injury to humans, no hot-tapped installation and maintenance, should shut down or do security processing to reach a safety condition, and then do hot-tapped operation. If there are no conditions to do hot-tapped operation, should shut down to avoid dangers. The dangerous gases are such gas and chlorine, etc.

#### **If doubting that the instrument in the event of failure, please do not operate it**

If there are something wrong with the instrument or it had been damaged, please contact us.

## Part 1 Introduction

Thermal gas mass flow meter is designed on the basis of thermal dispersion, and adopts method of constant differential temperature to measuring gas flow. It has advantages of small size, easy installation, high reliability and high accuracy, etc.

The meter contains two platinum resistance temperature sensors. The thermal principle operates by monitoring the cooling effect of a gas stream as it passes over a heated sensor. Gas flowing through the sensing section passes over two sensors one of which is used conventionally as a temperature sensor, whilst the other is used as a heater. The temperature sensor monitors the actual process values whilst the heater is maintained at a constant differential temperature above this by varying the power consumed by the sensor. The greater the gas velocity, the greater the cooling effect and power required to maintain the differential temperature. The measured heater power is therefore a measure of the gas mass flow rate.

The format of gas velocity and power is shown as below:

$$V = \frac{K[Q/\Delta T]^{1.87}}{\rho_g} \quad \dots\dots(1)$$

Where:  $\rho_g$  is specific gravity of medium

V is velocity

K is balance coefficient

Q is heater power

$\Delta T$  is differential temperature

The medium temperature range of meter is -40°C~220°C.

In the format (1), the specific gravity of medium is related to the density:

$$\rho = \rho_n \times \frac{101.325 + P}{101.325} \times \frac{273.15 + 20}{273.15 + T} \quad \dots\dots(2)$$

Where:  $\rho_g$  is the medium density in working condition ( $\text{kg}/\text{m}^3$ )

$\rho_n$  is the medium density in standard condition, 101.325kPa and 20°C ( $\text{kg}/\text{m}^3$ )

P is the pressure in working condition (kPa)

T is the temperature in working condition (°C)

In the formats (1) and (2), there is a certain functional relationship between the velocity and pressure in working condition, medium density, the temperature in working condition.

Due to the sensor temperature is always 30°C higher than the medium temperature (environment temperature), and the meter adopts method of constant differential temperature, therefore the meter do not need to do temperature and pressure compensation in principle.

PİKSEL OTOMASYON

## Part 2 Specifications

### Features

- Measuring the mass flow or volume flow of gas
- Do not need to do temperature and pressure compensation in principle with accurate measurement and easy operation.
- Wide range: 0.5Nm/s~100Nm/s for gas. The meter also can be used for gas leak detection
- Good vibration resistance and long service life. No moving parts and pressure sensor in transducer, no vibration influence on the measurement accuracy.
- Easy installation and maintenance. If the conditions on site are permissible, the meter can achieve a hot-tapped installation and maintenance. (Special order of custom-made)
- Digital design, high accuracy and stability
- Configuring with RS485 or HART interface to realize factory automation and integration

Description	Specifications
Measuring Medium	Various gases (Except the acetylene)
Pipe Size	DN10~DN4000mm
Velocity	0.1~100 Nm/s
Accuracy	±1~2.5%
Working Temperature	Sensor: -40°C ~ +200°C Transmitter: -20°C ~ +45°C
Working Pressure	Insertion Sensor: medium pressure≤ 1.6MPa Flanged Sensor: medium pressure≤ 1.6MPa Special pressure please contact us
Power Supply	Compact type: 24VDC or 220VAC, Power consumption ≤18W Remote type: 220VAC, Power consumption ≤19W
Response Time	1s
Output	4-20mA (optoelectronic isolation, maximum load 500Ω), Pulse, RS485 (optoelectronic isolation) and HART
Alarm Output	1-2 line Relay, Normally Open state, 10A/220V/AC or 5A/30V/DC
Sensor Type	Standard Insertion, Hot-tapped Insertion and Flanged
Construction	Compact and Remote

Pipe Material	Carbon steel, stainless steel, plastic, etc
Display	4 lines LCD Mass flow, Volume flow in standard condition, Flow totalizer, Date and Time, Working time, and Velocity, etc.
Protection Class	IP65
Sensor Housing Material	Stainless steel (316)

## Part 3 Mechanical Construction

### 3.1 Appearance



Fig. 1 Standard Insertion Flow Meter  
(Pipe size DN100-DN500)

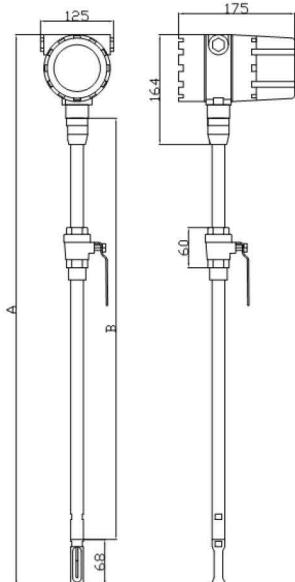


Fig. 2 Flanged Flow Meter  
(Pipe size DN10-DN80)

The insertion sensor of compact insertion flow meter should be inserted to axis of pipe, and the length of the insertion sensor is decided by pipe size, please confirm the pipe size when ordering. If the insertion sensor can't be inserted to axis of pipe, the manufacturer will provide a calibration factor to achieve an accurate measurement.



### 3.2 Dimensions

Dimensions of standard insertion sensor



DN	A	B
DN65-DN350	560	340
DN400 -DN500	640	425
DN600-DN1000	820	600

The dimensions of flanged sensor

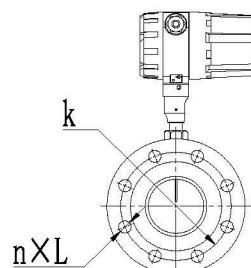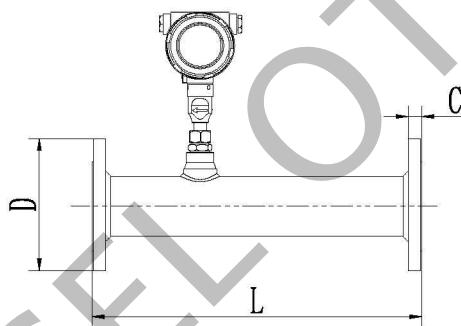

**PN1.6Mpa Plane and surface plate flat welding steel pipe flanges (Unit: mm)**

Nominal Diameter	Flange Outer diameter	Center Hole	Screw Hole	Screw Thread	Sealing Face		Flange Thickness	Pipeline Length
					d	f		
DN	D	k	n×L				C	L
15	95	65	4×14	M12	46	2	14	250
20	105	75	4×14	M12	56	2	16	250
25	115	85	4×14	M12	65	2	16	250
32	140	100	4×18	M16	76	2	18	250
40	150	110	4×18	M16	84	2	18	250
50	165	125	4×18	M16	99	2	20	280
65	185	145	4×18	M16	118	2	20	280
80	200	160	8×18	M16	132	2	20	280
100	220	180	8×18	M16	156	2	22	280

For DN15-DN80, the meter can be made with threading to connect.

The above table is used for rated pressure of 1.6MPa. If the rated pressure is more than 1.6MPa, please contact us for special order.

## Part 4 Wirings

ⓘ No operation when the meter is working


⚠ Confirm the power supply type

### 4.1 Instruction of Sensor Wirings

1	2	3	4
RT1	RT2	RH1	RH2


Temperature sensor (Pt1000)      Heater (Pt20)

### 4.2 Instruction of Transmitter Wirings

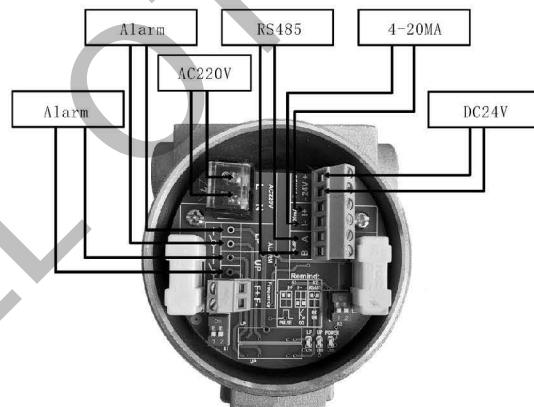


## 4.3 The Wirings of Power Supply

### 1. AC power supply

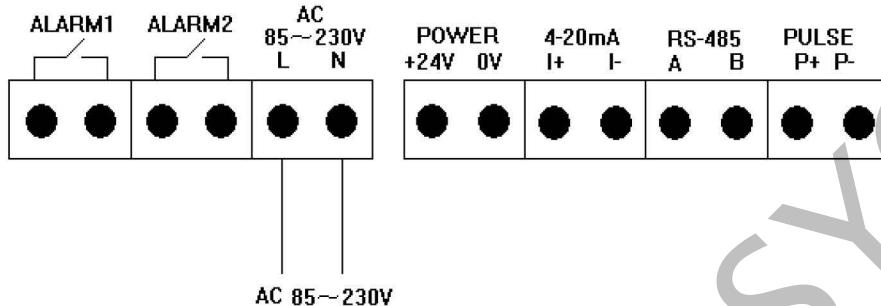


### 2. DC power supply

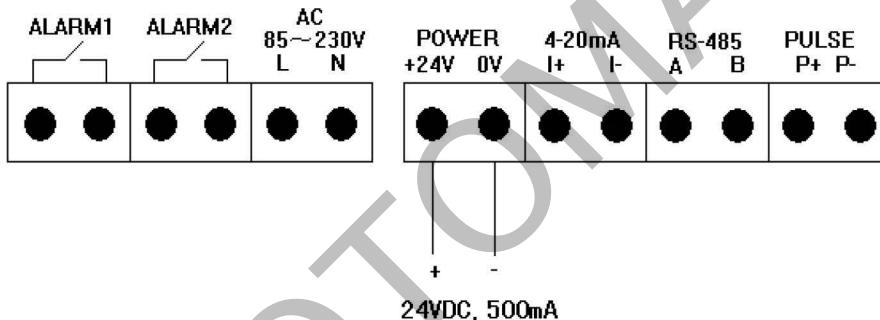


## 4.4 The Wirings of Outputs


### 1. The wirings of Four-Wire 4-20mA output and HART operator

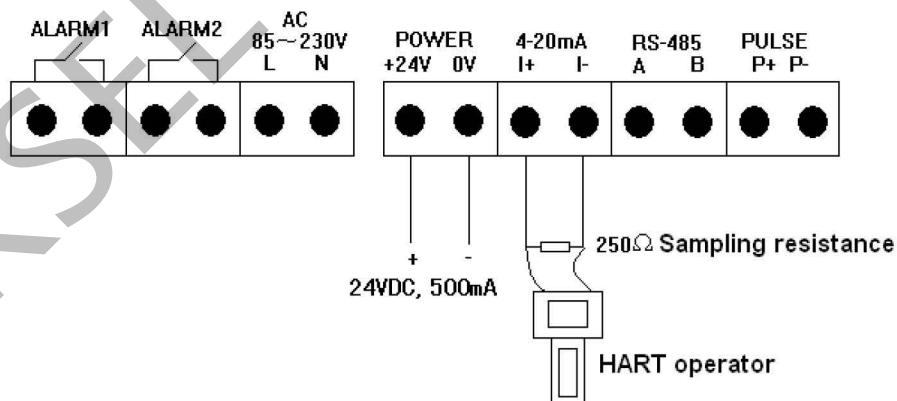


## 2. The wirings of RS485 output

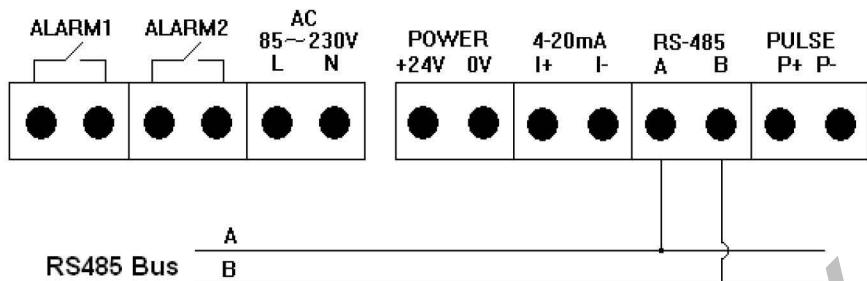

## 3. The wirings of pulse output

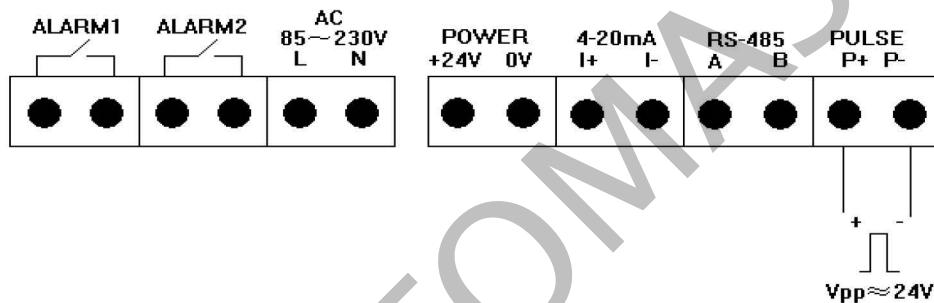

## 4. The wirings of alarm output

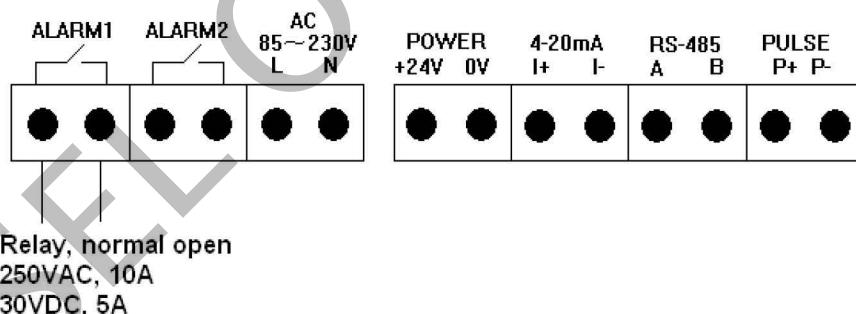

## Part 5 Installation


### 5.1 Installation Position

Thermal meters require a fully developed flow profile as a prerequisite for correct flow measurement. For this reason, please note the following points when installing the device.

- Observe the recommended inlet and outlet requirements.
- Good engineering practice is necessary for the associated pipe work and installation.
- Ensure correct alignment and orientation of the sensor.
- Take measures to reduce or avoid condensation (e.g. install a condensation trap, thermal insulation, etc.).
- The maximum permitted ambient temperatures and the medium temperature range must be observed.
- Install the transmitter in a shaded location or use a protective sun shield.
- For mechanical reasons, and in order to protect the pipe, it is advisable to support heavy sensors.
- No installation in where large vibration exists
- No exposure in the environment containing a lot of corrosive gas
- No sharing power supply with frequency converter, electric welding machine and other machines which can make power-line interference. If necessary, please add power conditioner for transmitter power supply.

#### Thermal insulation

When the gas is very humid or saturated with water (e. g. Bio Gas), the piping and flowmeter body should be insulated to prevent water droplets condensing on the measuring sensor.

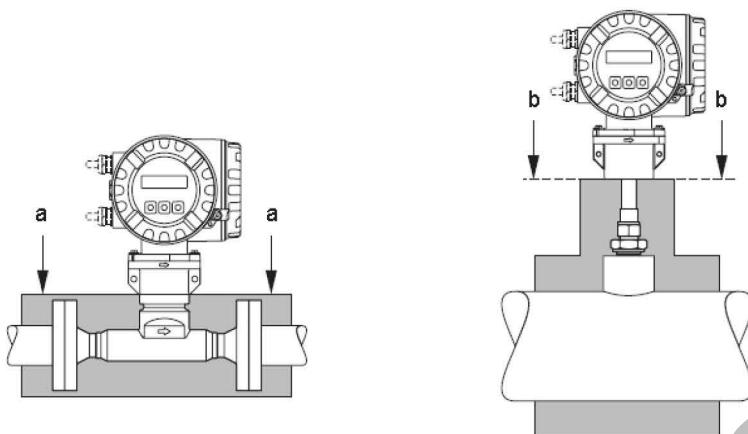

a Maximum insulation height for the flanged sensor


b Maximum insulation height for the insertion sensor

The thermal dispersion principle is sensitive to disturbed flow conditions.

- As a general rule, the thermal flowmeter should always be installed as far away as possible from any flow disturbances. For further information please refer to ISO 14511.
- Where two or more flow disturbances are located upstream of the meter, the recommended inlet length for the flow disturbance causing strongest disturbance must be used. E.g. where a valve is mounted before a bend, upstream of the flowmeter,  $50 \times DN$  of pipe work is required from the valve to the flowmeter.
- For very light gases such as Helium and Hydrogen all upstream distances should be doubled.


**The minimum recommendations for inlet and outlet runs (without flow conditioner) are:**

#### **Flanged sensor**

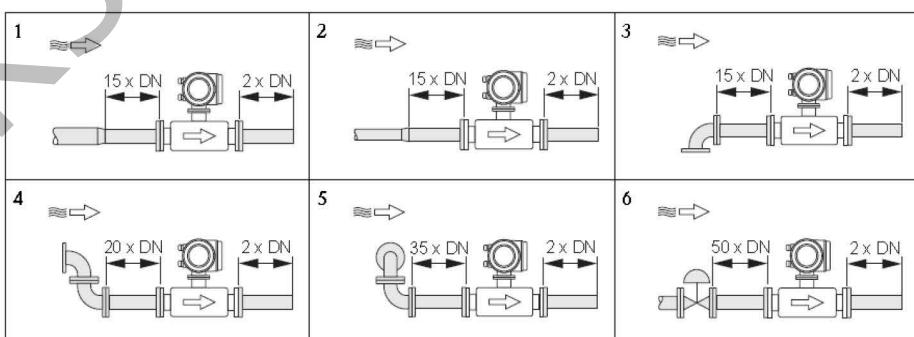

1 = Reduction, 2 = Expansion, 3 = 90° elbow or T-piece, 4 = 2 × 90° elbow, 5 = 2 × 90° elbow (3-dimensional), 6 = Control valve.

#### Insertion sensor

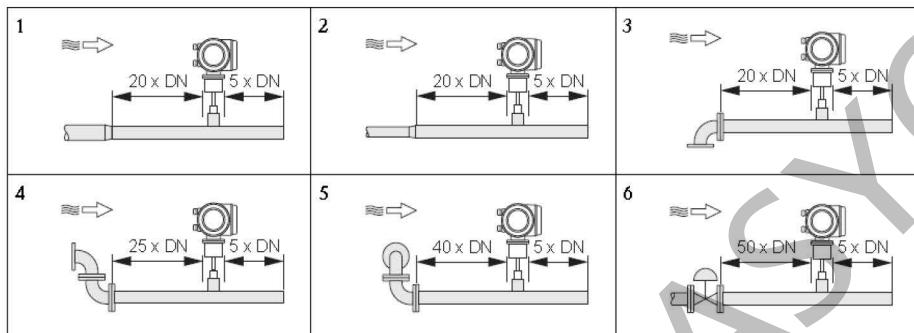

1 = Reduction, 2 = Expansion, 3 = 90° elbow or T-piece, 4 = 2 × 90° elbow, 5 = 2 × 90° elbow (3-dimensional), 6 = Control valve or pressure regulator.

A specially designed perforated plate flow conditioner can be installed if it is not possible to observe the inlet runs required.

## 5.2 Pipework requirements

- Good engineering practice should be followed at all times:
- Correct preparation, welding and finishing techniques
- Correctly sized gaskets
- Correctly aligned flanges and gaskets
- Connecting pipe work should match the internal diameter of the flowmeter.
- Maximum pipe diameter mismatch should not exceed:
  - 1 mm (0.04 inch) for diameters < DN 200 (8")
  - 3 mm (0.12 inch) for diameters ≥ DN 200 (8")
- New installations should be free of metallic and abrasive particles to prevent damage to the sensing elements on start-up

For further information please refer to ISO 14511.

## 5.3 Installation Steps

### The base of thermal flowmeter




### The base of standard insertion type

No welding in explosive environment

Carry out the welding operation in accordance with the requirements of special environment.

When installing, place the base on the top of pipe, and make the through-hole of base be perpendicular to axis of pipe. The good welding location of base and welding process is as below.

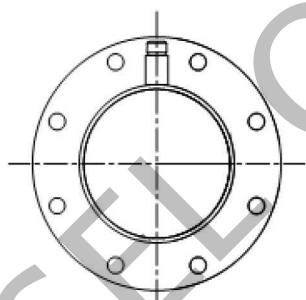

Good welding location of base

### The installation of standard insertion type

Identify an appropriate location for the flow meter.

Confirm the inner diameter and wall thickness of pipe

- Place the other part of meter into ball valve, and calculate the insertion depth according to the inner diameter and wall thickness of pipe. This step doesn't need to screw the nut by hand.
- Turn the connecting rod of sensor to make the mark direction of sensor as the same

flow direction.

- According the calculated data on site, ensure the insertion depth by corresponding calibration on the connecting rod, and then screw the nut tightly.
- If the meter is horizontal installation, the display of the meter can be installed in the direction of 90°, 180° or 270° to meet various requirements.

#### **The installation of hot-tapped insertion type**

- Before installation, please conform the connection type and install fittings.
- Before installation, the site must be shut down, and strictly follow the rules of factory.
- Identify an appropriate location for the flow meter.
- According to length requirement of meter, cut the pipe, and install the flanges and bolts on the pipe.
- Ensure the mark direction of meter is as the same flow direction, the display is perpendicular to horizontal plane, the axis of pipeline is paralleled to horizontal plane, the error can't be more than ±2.5, and then fix the meter by bolts.

# Part 6 Operation and Programming

## 6.1 Display

Main interface under working status (as shown below)

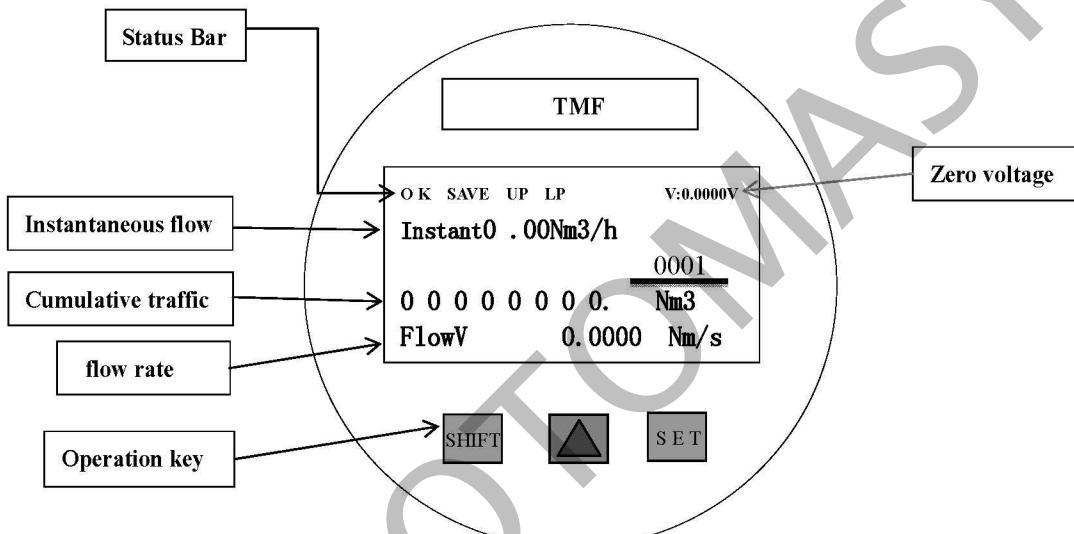


Figure 8

### Prompt line:

- (1) When the meter is working normally and power is on, it will perform self-test. When the self-test is normal, it will prompt **OK**, **SAVE**;
- (2) Instrument alarm channel prompt, **UP** indicates the upper limit alarm, **LP** indicates the lower limit alarm.
- (3) The instrument performs parameter setting by pressing the button. Generally, some parameters are set manually by using the button during installation.. The meter has three buttons, from left to right is **SHIFT** **▲** **SET**. Usually **SHIFT** is shift key, **▲** is add key, **SET** is confirm save and change button, confirm and shift button under password menu, Under the password menu **SET** is the confirmation and shift button.

## 6.2、Parameters setup

### 6.2.1 Main page display

OK SAVE UP LP V:0.0000V  
Instant 0 .00Nm3/h  
0001  
0 0 0 0 0 0 0 . Nm3  
FlowV 0.0000

Under this interface , press **SHIFT** ( Shift ) button to enter the setup menu;

### 6.2.2 Parameter setting main interface

Press **SHIFT** (Shift Select Menu)key

1.Common Functions  
2.Common parameters  
3.Common parameters  
0000

In the main interface, press **SHIFT** to enter the main menu interface. You can use the **SHIFT** shift keys to select the corresponding menu item and press **SET** to enter.

Language  
Chinese

In the main menu of the main interface, press **SET** to enter the common menu interface. Press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **▲** to modify the parameters.

The default is Chinese display, you can switch English display.

Caliber  
Calibration 080  
Actual 00080

Under the language menu, press **SET** to save and enter the caliber menu. Press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **▲** to modify the parameters.

Unit  
Nm3/h

Under the caliber menu, press **SET** to save and enter the unit menu. Press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **▲** to modify the parameters.

mailing address  
01

Under the unit menu, press **SET** to save and enter the communication address menu. Press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **▲** to modify the parameters.

↓

<b>Flow Coefficient</b>
<b>p/m<sup>3</sup></b>
<b>01.000</b>

↓

In the Communication Address menu, press **SET** to save and enter the flow coefficient menu. press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **A** to modify the parameters. The coefficient is proportional to the flow rate, which is the total coefficient.

↓

<b>Full flow</b>
<b>00001000.0000</b>

In the Flow Factor menu, press **SET** to save and enter the full flow menu. press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **A** to modify the parameters

↓

<b>Density</b>
<b>Kg/m<sup>3</sup></b>
<b>01.000</b>

Under the Full Flow menu, press **SET** to save and enter the Density menu. press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **A** to modify the parameters

↓

<b>Conversion coefficient</b>
<b>01.000</b>

Under the density setting menu, press **SET** to save and enter the conversion factor menu. press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **A** to modify the parameters. Enter the corresponding conversion coefficient value for different media.

↓


<b>Zero voltage</b>
<b>0.0000</b>

Under the Conversion Factor menu, press **SET** to save and enter the zero voltage menu. press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **A** to modify the parameters  
This menu is set to 0 point voltage.

↓

<b>Lower cut</b>
<b>000.0</b>

Under the zero voltage menu, press **SET** to save and enter the lower cut menu. press **SET** to save and go to the next menu, press **SHIFT** to move the cursor position, and, **A** to modify the parameters  
This menu cuts off the value of the instantaneous flow.

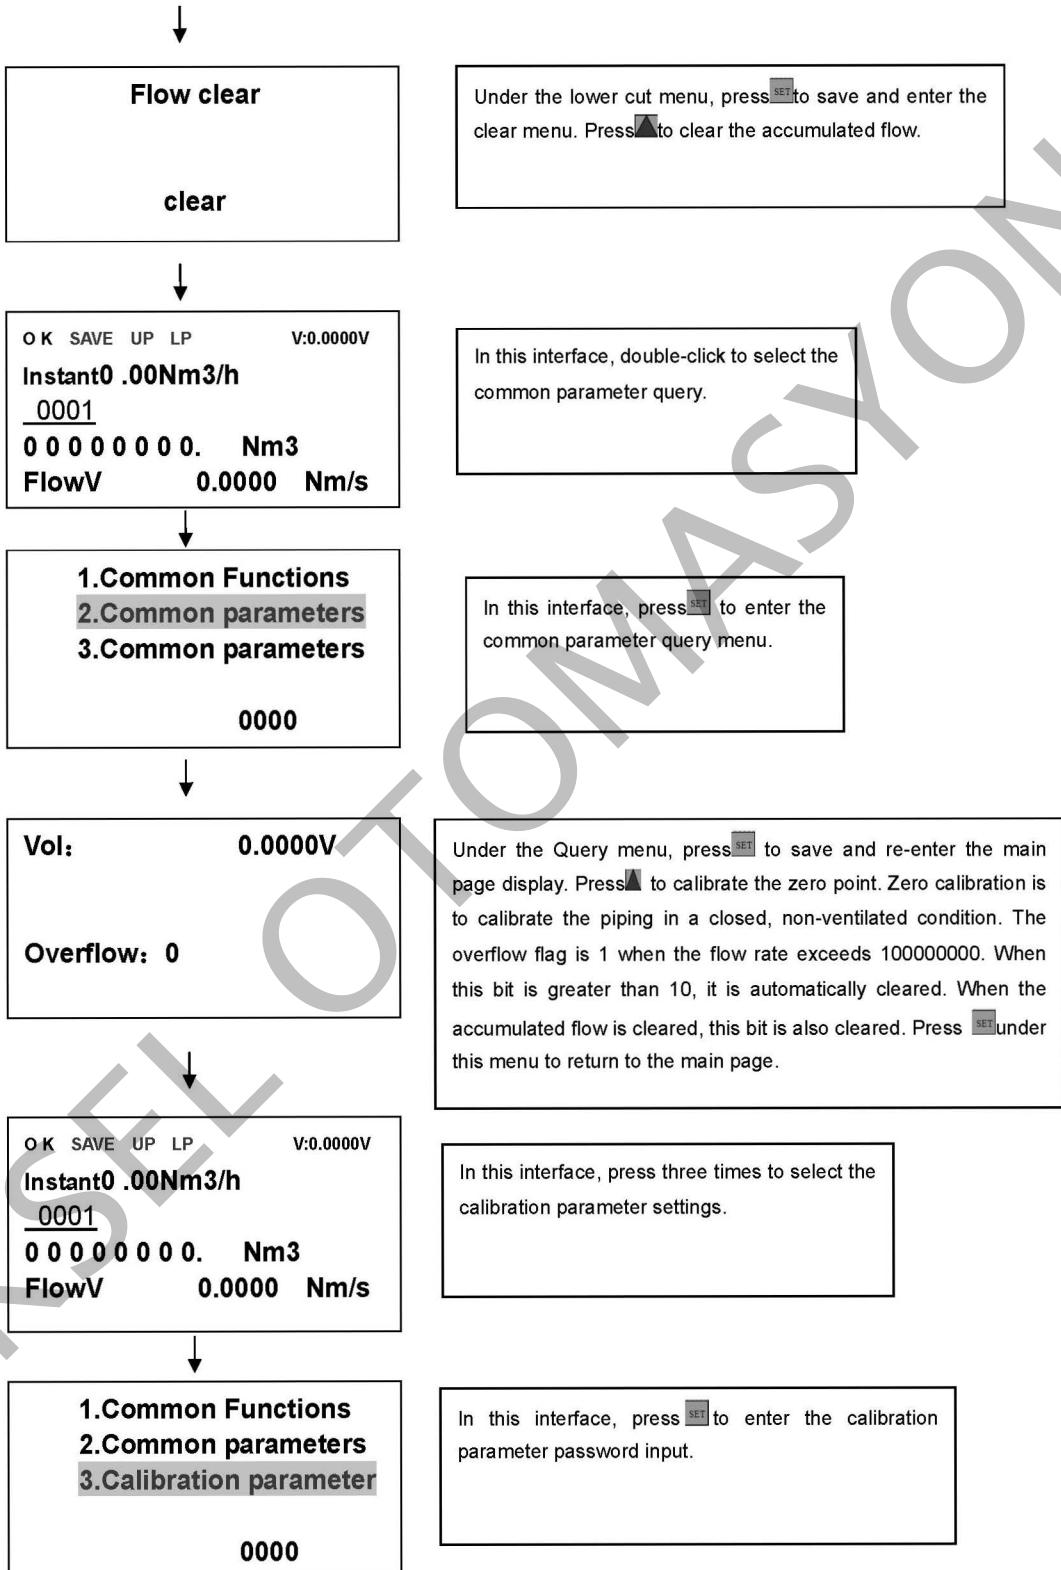

## Appendix 1 Troubleshooting and Repair

Fault	Cause	Solution
No display	1. No power supply	Get power supply
	2. SMPS is damaged	Get power supply, if the power indicator light is out, it means that the SMPS is damaged, Please contact supplier.
	3. The wirings of DC24V are reversed	Check the wirings, make the wirings right
	4. The position of LCD is wrong	Reinstall the LCD
	5. The LCD is damaged	Check the power indicator light. If the light is on, it means that the LCD is damaged. Please contact supplier
Low velocity	1. The wirings of sensor are reversed	Rewiring or reinstall the sensor
	2. The sensor is dirty	Clean sensor
	3. The sensor is damaged	Return to supplier
	4. Some parameters of flow setting are wrong	Check the parameters setting
Abnormal velocity and large fluctuation	1. Some parameters of velocity setting are wrong	Check the parameters setting
	2. Fluid properties is pulsating in turn	Adjust the system filter
	3. The sensor is dirty	Clean sensor
	4. The sensor is damaged	Return to supplier
Abnormal 4-20mA output	1. The setting of 20mA range is wrong	Right settings
	2. The Transmitter has fault	Return to supplier
	3. The connection is not a loop circuit	Check the connection
Abnormal frequency output	1. Some parameters of frequency setting are wrong	Right settings
	2. The Transmitter has fault	Return to supplier
	3. The connection cable is damaged	Check the connection
Abnormal alarm	1. Some parameters of setting are wrong	Right settings
	2. The meter has no alarm function	Contact supplier
	3. The relay is damaged	Return to supplier
Abnormal RS485 output	1. The settings of baud rate and address are wrong	Right settings
	2. The wirings are reversed	rewiring
	3. The connection cable is damaged	Check the connection

## Appendix 2 The Density and Conversion Coefficient of Common Gas

According to different gas on site, the calibration in lab translates the flow rate of actual gas on site into flow rate of air, and then begins to calibrate the flow rate at present. Therefore, when using the meter on site, the meter displays mass flow or volume flow of actual gas.

When translating the flow rate of gas into flow rate of air, there is a conversion coefficient table of different gas.

Table 1 The Density and Conversion Coefficient of Common Gas

	Gas	Specific heat (KJ/g°C)	Density (g/l, 0°C)	Conversion Coefficient
0	Air	0.24	1.2048	1.0000
1	Argon (Ar)	0.125	1.6605	1.4066
2	Arsine (AsH <sup>3</sup> )	0.1168	3.478	0.6690
3	Boron Tribromide (BBr <sup>3</sup> )	0.0647	11.18	0.3758
4	Boron Trichloride (BCl <sup>3</sup> )	0.1217	5.227	0.4274
5	Boron Trifluoride (BF <sup>3</sup> )	0.1779	3.025	0.5050
6	Borane (B <sup>2</sup> H <sup>6</sup> )	0.502	1.235	0.4384
7	Carbon Tetrachloride (CCl <sup>4</sup> )	0.1297	6.86	0.3052
8	Carbon Tetrafluoride (CF <sup>4</sup> )	0.1659	3.9636	0.4255
9	Methane (CH <sup>4</sup> )	0.5318	0.715	0.7147
10	Ethylene (C <sup>2</sup> H <sup>4</sup> )	0.3658	1.251	0.5944
11	Ethane (C <sup>2</sup> H <sup>6</sup> )	0.4241	1.342	0.4781
12	Allylene (C <sup>3</sup> H <sup>4</sup> )	0.3633	1.787	0.4185
13	Propylene (C <sup>3</sup> H <sup>6</sup> )	0.3659	1.877	0.3956
14	Propane (C <sup>3</sup> H <sup>8</sup> )	0.399	1.967	0.3459
15	Butyne (C <sup>4</sup> H <sup>6</sup> )	0.3515	2.413	0.3201
16	Butene (C <sup>4</sup> H <sup>8</sup> )	0.3723	2.503	0.2923
17	Butane (C <sup>4</sup> H <sup>10</sup> )	0.413	2.593	0.2535
18	Pentane (C <sup>5</sup> H <sup>12</sup> )	0.3916	3.219	0.2157
19	Carbinol (CH <sup>3</sup> OH)	0.3277	1.43	0.5805
20	Ethanol (C <sup>2</sup> H <sup>6</sup> O)	0.3398	2.055	0.3897
21	Trichloroethane (C <sup>3</sup> H <sup>3</sup> Cl <sup>3</sup> )	0.1654	5.95	0.2763
22	Carbon Monoxide (CO)	0.2488	1.25	0.9940
23	Carbon Dioxide (CO <sup>2</sup> )	0.2017	1.964	0.7326
24	Cyanide (C <sup>2</sup> N <sup>2</sup> )	0.2608	2.322	0.4493

25	Chlorine (Cl <sup>2</sup> )	0.1145	3.163.	0.8529
26	Deuterium (D <sup>2</sup> )	1.7325	0.1798	0.9921
27	Fluoride (F <sup>2</sup> )	0.197	1.695	0.9255
28	Germanium Tetrachloride (GeCl <sup>4</sup> )	0.1072	9.565	0.2654
29	Germane (GeH <sub>4</sub> )	0.1405	3.418	0.5656
30	Hydrogen (H <sub>2</sub> )	3.4224	0.0899	1.0040
31	Hydrogen Bromide (HBr)	0.0861	3.61	0.9940
32	Hydrogen Chloride (HCl)	0.1911	1.627	0.9940
33	Hydrogen Fluoride (HF)	0.3482	0.893	0.9940
34	Hydrogen Iodide (HI)	0.0545	5.707	0.9930
35	Hydrogen Sulfide (H <sub>2</sub> S)	0.2278	1.52	0.8390
36	Helium (He)	1.2418	0.1786	1.4066
37	Krypton (Kr)	0.0593	3.739	1.4066
38	nitrogen (N <sub>2</sub> )	0.2486	1.25	0.9940
39	Neon (Ne)	0.2464	0.9	1.4066
40	Ammonia (NH <sub>3</sub> )	0.5005	0.76	0.7147
41	Nitric Oxide (NO)	0.2378	1.339	0.9702
42	Nitrogen Dioxide (NO <sub>2</sub> )	0.1923	2.052	0.7366
43	Nitrous Oxide (N <sub>2</sub> O)	0.2098	1.964	0.7048
44	Oxygen (O <sub>2</sub> )	0.2196	1.427	0.9861
45	Phosphorus Trichloride (PCl <sub>3</sub> )	0.1247	6.127	0.3559
46	Phosphorane (PH <sub>3</sub> )	0.261	1.517	0.6869
47	Phosphorus Pentafluoride (PF <sub>5</sub> )	0.1611	5.62	0.3002
48	Phosphorus Oxychloride (POCl <sub>3</sub> )	0.1324	6.845	0.3002
49	Silicon Tetrachloride (SiCl <sub>4</sub> )	0.127	7.5847	0.2823
50	Silicon Fluoride (SiF <sub>4</sub> )	0.1692	4.643	0.3817
51	Silane (SiH <sub>4</sub> )	0.3189	1.433	0.5954
52	Dichlorosilane (SiH <sub>2</sub> Cl <sub>2</sub> )	0.1472	4.506	0.4095
53	Trichlorosilane (SiHCl <sub>3</sub> )	0.1332	6.043	0.3380
54	Sulfur Hexafluoride (SF <sub>6</sub> )	0.1588	6.516	0.2624
55	Sulfur Dioxide (SO <sub>2</sub> )	0.1489	2.858	0.6829
56	Titanium Tetrachloride (TiCl <sub>4</sub> )	0.1572	8.465	0.2048
57	Tungsten Hexafluoride (WF <sub>6</sub> )	0.0956	13.29	0.2137
58	Xenon (Xe)	0.0379	5.858	1.4066

## Appendix 3 Upper Range Value of Common Gas

(Unit: Nm<sup>3</sup>/h. The follow table can be extended)

Nominal Diameter (mm)	Air	Nitrogen (N <sub>2</sub> )	Oxygen (O <sub>2</sub> )	Hydrogen(H <sub>2</sub> )
15	65	65	32	10
25	175	175	89	28
32	290	290	144	45
40	450	450	226	70
50	700	700	352	110
65	1200	1200	600	185
80	1800	1800	900	280
100	2800	2800	1420	470
125	4400	4400	2210	700
150	6300	6300	3200	940
200	10000	10000	5650	1880
250	17000	17000	8830	2820
300	25000	25000	12720	4060
400	45000	45000	22608	7200
500	70000	70000	35325	11280
600	100000	100000	50638	16300
700	135000	135000	69240	22100
800	180000	180000	90432	29000
900	220000	220000	114500	77807
1000	280000	280000	141300	81120
1200	400000	400000	203480	91972
1500	600000	600000	318000	101520
2000	700000	700000	565200	180480

The flow rate in standard condition: The flow rate is in the condition of 20°C temperature and 101.325kPa pressure.

The unit of flow rate is optional: Nm<sup>3</sup>/h, Nm<sup>3</sup>/min, L/h, L/min, t/h, t/min, kg/h or kg/min.

The reduction formula of flow rate in working condition and flow rate in standard condition:

$$Q_s = \frac{0.101325+p}{0.10325} * \frac{273.15+20}{273.15+t} * Q_n$$

Q<sub>s</sub>: The flow rate in standard condition (Nm<sup>3</sup>/h).

Qn: The flow rate in working condition (m<sup>3</sup>/h).

t: The medium temperature in working condition (°C).

p: The medium pressure in working condition (Gauge pressure, MPa).

PİKSEL OTOMASYON